

RX-V1 Standard I/R

Function	Standard I/R				E-I/R	RS-232c
	Custom Code		Data Code			
TAPE PLAY	7	A	0	0	YES	
TAPE REWIND	7	A	0	1	YES	
TAPE FORWARD	7	A	0	2	YES	
TAPE STOP	7	A	0	3	YES	
TAPE REC PAUSE	7	A	0	4	YES	
TAPE REC MUTE	7	A	0	5	YES	
TAPE DECK A/B	7	A	0	6	YES	
TAPE DIR A	7	A	0	7	YES	
CD PLAY	7	A	0	8	YES	
CD PAUSE STOP	7	A	0	9	YES	
CD SKIP FORWARD	7	A	0	A	YES	
CD SKIP REVERSE	7	A	0	B	YES	
CD SEARCH FORWARD	7	A	0	C	YES	
CD SEARCH REVERSE	7	A	0	D	YES	
INPUT VCR1	7	A	0	F	YES	YES
TUNER PRESET+	7	A	1	0	YES	
TUNER PRESET -	7	A	1	1	YES	
TUNER PAGE TOGGLE	7	A	1	2	YES	
INPUT VCR2	7	A	1	3	YES	YES
INPUT PHONO	7	A	1	4	YES	YES
INPUT CD	7	A	1	5	YES	YES
INPUT TUNER	7	A	1	6	YES	YES
INPUT LD [V1]	7	A	1	7	YES	YES
INPUT TAPE [V1]	7	A	1	8	YES	YES
INPUT CD-R [-V1]	7	A	1	9	NO	
VOLUME UP	7	A	1	A	YES	YES
VOLUME DOWN	7	A	1	B	YES	YES
MUTE TOGGLE	7	A	1	C	YES	
POWER ON	7	A	1	D	YES	YES
STAND BY	7	A	1	E	YES	YES
TAPE DIR B	7	A	4	0	YES	
CD SKIP +	7	A	4	F	YES	
CD SKIP -	7	A	5	0	YES	
INPUT D-TV/LD (D-TV[V1])	7	A	5	4	YES	
INPUT V-AUX	7	A	5	5	YES	X
EFFECT OFF/ON TOGGLE	7	A	5	6	YES	
SLEEP OFF/120/90/60/30MIN. TOGGLE	7	A	5	7	YES	
TEST	7	A	8	5	YES	
CH. SELECT TOGGLE (PARAM. LEVEL[V1])	7	A	8	6		
6CH. INPUT OFF/ON TOGGLE	7	A	8	7		
DSP PROGRAM 1 TOGGLE	7	A	8	8		
DSP PROGRAM 2 TOGGLE	7	A	8	9		
DSP PROGRAM 3 TOGGLE	7	A	8	A		
DSP PROGRAM 4 TOGGLE	7	A	8	B		
DSP PROGRAM 5 TOGGLE	7	A	8	C		
DSP PROGRAM 6 TOGGLE	7	A	8	D		
DSP PROGRAM 7 TOGGLE	7	A	8	E		
DSP PROGRAM 8 TOGGLE	7	A	8	F		
DSP PROGRAM 9 TOGGLE	7	A	9	0		
DSP PROGRAM 10 TOGGLE	7	A	9	1		

DSP PROGRAM 11 TOGGLE	7	A	9	2	YES	
DSP PROGRAM 12 TOGGLE	7	A	9	3	YES	
6.1/ES OFF/ON TOGGLE	7	A	9	7	YES	
SET MENU DOWN (PARAMETER DOWN)	7	A	9	C		
SET MENU UP (PARAMETER UP)	7	A	9	D		
SET MENU +	7	A	9	E		
SET MENU - (PARAMETER LEFT)	7	A	9	F		
INPUT CABLE/SAT (CABLE[3])	7	A	C	0	YES	YES
INPUT DVD	7	A	C	1	YES	YES
ON SCREEN OFF/SHORT/FULL TOGGLE	7	A	C	2		
PARAMETER DOWN	7	A	C	3		
PARAMETER UP (SET MENU DOWN)	7	A	C	4		
PARAMETER + (SET MENU UP)	7	A	C	5		
PARAMETER RIGHT (SET MENU RIGHT)	7	A	C	6		
PARAMETER LEFT (SET MENU LEFT)	7	A	C	7		
PARAMETER / (VCR3 [V1])	7	A	C	8	NO / YES	YES
INPUT MD/TAPE (MD[V1])	7	A	C	9	YES	YES
INPUT SAT[3]	7	A	C	A	NO	
ZONE2 INPUT SAT(3)	7	A	C	B	NO	
ZONE2 INPUT CBL/SAT (CABLE[3])	7	A	C	C	YES	YES
ZONE2 INPUT DVD	7	A	C	D	YES	YES
ZONE2 INPUT VCR3 [V1]	7	A	C	E	YES	YES
ZONE2 INPUT MD/TAPE (MD[V1])	7	A	C	F	YES	YES
ZONE2 INPUT PHONO	7	A	D	0	YES	YES
ZONE2 INPUT CD	7	A	D	1	YES	YES
ZONE2 INPUT TUNER	7	A	D	2	YES	YES
ZONE2 INPUT TAPE [V1]	7	A	D	3	YES	YES
ZONE2 INPUT CD-R(-V1)	7	A	D	4	NO	
ZONE2 INPUT LD [V1]	7	A	D	5	YES	YES
ZONE2 INPUT VCR1	7	A	D	6	YES	YES
ZONE2 INPUT VCR2/DVR (VCR[V1])	7	A	D	7	YES	YES
ZONE2 INPUT V-AUX	7	A	D	8	YES	YES
ZONE2 INPUT D-TV	7	A	D	9	YES	YES
ZONE2 VOLUME UP	7	A	D	A	YES	YES