

RX-V800 Extended I/R

Function	Extended I/R				I/R
	Custom Code		Data Code		
ZONE2 MUTE ON	7	E	A	0	YES
ZONE2 MUTE OFF	7	E	A	1	YES
AUDIO MUTE ON	7	E	A	2	YES
AUDIO MUTE OFF	7	E	A	3	YES
6CH INPUT ON	7	E	A	4	YES
6CH INPUT OFF	7	E	A	5	YES
INPUT MODE AUTO	7	E	A	6	YES
INPUT MODE DD RF	7	E	A	7	NO
INPUT MODE DTS	7	E	A	8	YES
INPUT MODE DIGITAL	7	E	A	9	NO
INPUT MODE ANALOG	7	E	A	A	YES
SPEAKER A ON	7	E	A	B	YES
SPEAKER A OFF	7	E	A	C	YES
SPEAKER B ON	7	E	A	D	YES
SPEAKER B OFF	7	E	A	E	YES
ON SCREEN OFF	7	E	B	0	YES
ON SCREEN SHORT	7	E	B	1	YES
ON SCREEN FULL	7	E	B	2	YES
SLEEP OFF	7	E	B	3	YES
SLEEP 120 min.	7	E	B	4	YES
SLEEP 90 min.	7	E	B	5	YES
SLEEP 60 min.	7	E	B	6	YES
SLEEP 30 MIN.	7	E	B	7	YES
6.1/ES ON	7	E	B	8	YES
6.1/ES OFF	7	E	B	9	YES
ZONE2 POWER ON	7	E	B	A	YES
ZONE2 POWER OFF	7	E	B	B	YES
TUNER BAND FM	7	E	B	C	YES
TUNER BAND AM	7	E	B	D	YES
AUTO TUNING UP	7	E	B	E	YES
AUTO TUNING DOWN	7	E	B	F	YES
EFFECT OFF	7	E	E	0	YES
MUSIC DSP PROGRAM	7	E	E	1	NO
MUSIC DSP PROGRAM	7	E	E	2	NO
MUSIC DSP PROGRAM	7	E	E	3	NO
MUSIC DSP PROGRAM	7	E	E	4	HALL
MUSIC DSP PROGRAM	7	E	E	5	CHURCH
MUSIC DSP PROGRAM	7	E	E	6	NO
MUSIC DSP PROGRAM	7	E	E	7	NO
MUSIC DSP PROGRAM	7	E	E	8	JAZZ CLUB
MUSIC DSP PROGRAM	7	E	E	9	ROCK CONCERT
MUSIC DSP PROGRAM	7	E	E	A	NO
MUSIC DSP PROGRAM	7	E	E	B	NO
MUSIC DSP PROGRAM	7	E	E	C	NO
MUSIC DSP PROGRAM	7	E	E	D	DISCO
MUSIC DSP PROGRAM	7	E	E	E	GAME
MUSIC DSP PROGRAM	7	E	E	F	5CH STEREO
CINEMA DSP PROGRAM	7	E	F	0	NO
CINEMA DSP PROGRAM	7	E	F	1	TV SPORTS
CINEMA DSP PROGRAM	7	E	F	2	MONO MOVIE

CINEMA DSP PROGRAM	7	E	F	3	NO
CINEMA DSP PROGRAM	7	E	F	4	SPECTACLE
CINEMA DSP PROGRAM	7	E	F	5	SCI-FI
CINEMA DSP PROGRAM	7	E	F	6	ADVENTURE
CINEMA DSP PROGRAM	7	E	F	7	GENERAL
CINEMA DSP PROGRAM	7	E	F	8	NORMAL
CINEMA DSP PROGRAM	7	E	F	9	ENHANCED
CINEMA DSP PROGRAM	7	E	F	A	NO
CINEMA DSP PROGRAM	7	E	F	B	NO
CINEMA DSP PROGRAM	7	E	F	C	NO
CINEMA DSP PROGRAM	7	E	F	D	NO
CINEMA DSP PROGRAM	7	E	F	E	NO
TUNER PAGE A	7	A	E	0	YES
TUNER PAGE B	7	A	E	1	YES
TUNER PAGE C	7	A	E	2	YES
TUNER PAGE D	7	A	E	3	YES
TUNER PAGE E	7	A	E	4	YES
TUNER PRESET 1	7	A	E	5	YES
TUNER PRESET 2	7	A	E	6	YES
TUNER PRESET 3	7	A	E	7	YES
TUNER PRESET 4	7	A	E	8	YES
TUNER PRESET 5	7	A	E	9	YES
TUNER PRESET 6	7	A	E	A	YES
TUNER PRESET 7	7	A	E	B	YES
TUNER PRESET 8	7	A	E	C	YES
DVD-C996 E-IR CODES					IN REMOTE
DVD-C996 NORMAL PLAY MODE	7	C	F	0	NO
DVD-C996 RANDOM PLAY MODE	7	C	F	1	NO
DVD-C996 PROGRAM MODE	7	C	F	2	NO
DVD-C996 REPEAT MODE OFF	7	C	F	3	NO
DVD-C996 ALL DISC REPEAT	7	C	F	5	NO
HOME BANK MAIN	7	E	2	0	YES
HOME BANK A	7	E	2	1	YES
HOME BANK B	7	E	2	2	YES
HOME BANK C	7	E	2	3	YES
HOME BANK D	7	E	2	4	NO
HOME BANK E	7	E	2	5	NO
HOME BANK F	7	E	2	6	NO
HOME MEMORY A	7	E	2	B	YES
HOME MEMORY B	7	E	2	C	YES
HOME MEMORY C	7	E	2	D	YES
HOME MEMORY D	7	E	2	E	NO
HOME MEMORY E	7	E	2	F	NO
HOME MEMORY F	7	E	3	0	NO
HOME RECALL A	7	E	3	5	YES
HOME RECALL B	7	E	3	6	YES
HOME RECALL C	7	E	3	7	YES
HOME RECALL D	7	E	3	8	NO
HOME RECALL E	7	E	3	9	NO
HOME RECALL F	7	E	3	A	NO
VOLUME BANK MAIN	7	E	6	0	YES
VOLUME BANK A	7	E	6	1	YES
VOLUME BANK B	7	E	6	2	YES

VOLUME BANK C	7	E	6	3	YES
VOLUME BANK D	7	E	6	4	NO
VOLUME BANK E	7	E	6	5	NO
VOLUME BANK F	7	E	6	6	NO
VOLUME MEMORY A	7	E	6	B	YES
VOLUME MEMORY B	7	E	6	C	YES
VOLUME MEMORY C	7	E	6	D	YES
VOLUME MEMORY D	7	E	6	E	NO
VOLUME MEMORY E	7	E	6	F	NO
VOLUME MEMORY F	7	E	7	0	NO
VOLUME RECALL A	7	E	7	5	YES
VOLUME RECALL B	7	E	7	6	YES
VOLUME RECALL C	7	E	7	7	YES
VOLUME RECALL D	7	E	7	8	NO
VOLUME RECALL E	7	E	7	9	NO
VOLUME RECALL F	7	E	7	A	NO