

			<b>RX-V1 EXTENDED I/R CODES</b>		
<b>Normal / Standard I/R CODES</b>			<b>FUNCTION</b>	<b>I/R</b>	<b>RS-232c</b>
7A	0	0	TAPE PLAY	X	
7A	0	1	TAPE REWIND	X	
7A	0	2	TAPE FORWARD	X	
7A	0	3	TAPE STOP	X	
7A	0	4	TAPE REC PAUSE	X	
7A	0	5	TAPE REC MUTE	X	
7A	0	6	TAPE DECK A/B	X	
7A	0	7	TAPE DIR A	X	
7A	0	8	CD PLAY	X	
7A	0	9	CD PAUSE STOP	X	
7A	0	A	CD SKIP F	X	
7A	0	B	CD SKIP R	X	
7A	0	C	CD SEARCH F	X	
7A	0	D	CD SEARCH R	X	
7A	0	F	INPUT VCR1	Y	
7A	1	0	TUNER PRESET +	Y	
7A	1	1	TUNER PRESET -	Y	
7A	1	2	TUNER PAGE TOGGLE	Y	
7A	1	3	INPUT VCR2/DVA (VCR2)	Y	
7A	1	4	INPUT PHONO	Y	
7A	1	5	INPUT CD	Y	
7A	1	6	INPUT TUNER	Y	
7A	1	7	(INPUT LD)	Y	
7A	1	8	(INPUT TAPE)	Y	
7A	1	9	INPUT CD-R(TAPE2 MON)	X	
7A	1	A	VOLUME UP	Y	
7A	1	B	VOLUME DOWN	Y	
7A	1	C	AUDIO MUTE OFF/ON TOGGLE	Y	
7A	1	D	POWER ON	Y	
7A	1	E	POWER OFF	Y	
7A	4	0	TAPE DIR B	X	
7A	4	F	CD DISC SKIP +	X	
7A	5	0	CD DISC SKIP -	X	
7A	5	4	INPUT D-TV/LD (D-TV)	Y	
7A	5	5	INPUT V-AUX	Y	
7A	5	6	EFFECT OFF/ON TOGGLE	Y	
7A	5	7	SLEEP OFF/12/90/60/30min. TOGGLE	Y	
7A	8	5	TEST	Y	
7A	8	6	LEVEL (PARAMETER LEVEL)	Y	
7A	8	7	6CH INPUT OFF/ON TOGGLE	Y	
7A	8	8	PROGRAM 1 SUB PRG TOGGLE	Y	
7A	8	9	PROGRAM 2 SUB PRG TOGGLE	Y	
7A	8	A	PROGRAM 3 SUB PRG TOGGLE	Y	
7A	8	B	PROGRAM 4 SUB PRG TOGGLE	Y	
7A	8	C	PROGRAM 5 SUB PRG TOGGLE	Y	
7A	8	D	PROGRAM 6 SUB PRG TOGGLE	Y	
7A	8	E	PROGRAM 7 SUB PRG TOGGLE	Y	
7A	8	F	PROGRAM 8 SUB PRG TOGGLE	Y	
7A	9	0	PROGRAM 9 SUB PRG TOGGLE	Y	
7A	9	1	PROGRAM 10 SUB PRG TOGGLE	Y	
7A	9	2	PROGRAM 11 SUB PRG TOGGLE	Y	
7A	9	3	PROGRAM 12 SUB PRG TOGGLE	Y	

Extended			Function	RX-V1	
I/R Code				I/R	RS-232c
7A	9	7	6.1/ES OFF/ON TOGGLE	Y	
7A	9	C	SET MENU DOWN (PARAMETER DOWN)	PARAMETER DOWN	
7A	9	D	SET MENU UP (PARAMETER UP)	PARAMETER UP	
7A	9	E	SET MENU +	X	
7A	9	F	SET MENU - (PARAMETER LEFT)	PARAMETER LEFT	
7A	C	0	INPUT CBL/SAT (CABLE)	Y	
7A	C	1	INPUT DVD	Y	
7A	C	2	ON SCREEN OFF/SHORT/FULL TOGGLE	Y	
7A	C	3	PARAMETER DOWN	X	
7A	C	4	PARAMETER UP (SET MENU DOWN)	SET MENU DOWN	
7A	C	5	PARAMETER + (SET MENU UP)	SET MENU UP	
7A	C	6	PARAMETER RIGHT (SET MENU RIGHT)	Y/SET MENU RIGHT	
7A	C	7	PARAMETER LEFT (SET MENU LEFT)	SET MENU LEFT	
7A	C	8	PARAMETER - (VCR3)	VCR3	
7A	C	9	INPUT MD/TAPE(MD)	Y	
7A	C	A	INPUT SAT	Y	
7A	C	B	ZONE2 INPUT SAT	X	
7A	C	C	ZONE2 INPUT CBL/SAT(CABLE) CB-SAT	Y	
7A	C	D	ZONE2 INPUT DVD	Y	
7A	C	E	ZONE2 INPUT VCR3	Y	
7A	C	F	ZONE2 INPUT MD/TAPE(MD)	Y	
7A	D	0	ZONE2 INPUT PHONO	Y	
7A	D	1	ZONE2 INPUT CD	Y	
7A	D	2	ZONE2 INPUT TUNER	Y	
7A	D	3	ZONE2 INPUT TAPE	Y	
7A	D	4	ZONE2 INPUT CD-R(TAPE2)	X	
7A	D	5	ZONE2 INPUT LD	Y	
7A	D	6	ZONE2 INPUT VCR1	Y	
7A	D	7	ZONE2 INPUT VCR2/DVR(VCR2)	Y	
7A	D	8	ZONE2 INPUT V-AUX	Y	
7A	D	9	ZONE2 INPUT D-TV/LD(D-TV)	Y	
7A	D	A	ZONE2 VOLUME UP	Y	
7A	D	B	ZONE2 VOLUME DOWN	Y	
7A	D	C			
7A	D	D			
7A	D	E			
7A	D	F	DIAG IN/OUT TOGGLE	N	
7A	E	0	TUNER PAGE A	Y	
7A	E	1	TUNER PAGE B	Y	
7A	E	2	TUNER PAGE C	Y	
7A	E	3	TUNER PAGE D	Y	
7A	E	4	TUNER PAGE E	Y	
7A	E	5	TUNER PRESET # 1	Y	
7A	E	6	TUNER PRESET #2	Y	
7A	E	7	TUNER PRESET #3	Y	
7A	E	8	TUNER PRESET #4	Y	
7A	E	9	TUNER PRESET #5	Y	
7A	E	A	TUNER PRESET #6	Y	
7A	E	B	TUNER PRESET #7	Y	
7A	E	C	TUNER PRESET #8	Y	
7E	2	0	HOME BANK MAIN	Y	
7E	2	1	HOME BANK A	Y	

Extended			Function	RX-V1	
I/R Code				I/R	RS-232c
7E	2	2	HOME BANK B	Y	
7E	2	3	HOME BANK C	Y	
7E	2	4	HOME BANK D	Y	
7E	2	5	HOME BANK E	Y	
7E	2	6	HOME BANK F	Y	
7E	2	B	HOME MEMORY A	Y	
7E	2	C	HOME MEMORY B	Y	
7E	2	D	HOME MEMORY C	Y	
7E	2	E	HOME MEMORY D	X	
7E	2	F	HOME MEMORY E	Y	
7E	3	0	HOME MEMORY F	Y	
7E	3	5	HOME RECALL A	Y	
7E	3	6	HOME RECALL B	Y	
7E	3	7	HOME RECALL C	Y	
7E	3	8	HOME RECALL D	Y	
7E	3	9	HOME RECALL E	Y	
7E	3	0	HOME RECALL F	Y	
7E	6	0	VOLUME BANK MAIN	Y	
7E	6	1	VOLUME BANK A	Y	
7E	6	2	VOLUME BANK B	Y	
7E	6	3	VOLUME BANK C	Y	
7E	6	4	VOLUME BANK D	Y	
7E	6	5	VOLUME BANK E	Y	
7E	6	6	VOLUME BANK F	Y	
7E	6	B	VOLUME MEMORY A	Y	
7E	6	C	VOLUME MEMORY B	Y	
7E	6	D	VOLUME MEMORY C	Y	
7E	6	E	VOLUME MEMORY D	Y	
7E	6	F	VOLUME MEMORY E	Y	
7E	7	0	VOLUME MEMORY F	Y	
7E	7	5	VOLUME RECALL A	Y	
7E	7	6	VOLUME RECALL B	Y	
7E	7	7	VOLUME RECALL C	Y	
7E	7	8	VOLUME RECALL D	Y	
7E	7	9	VOLUME RECALL E	Y	
7E	7	A	VOLUME RECALL F	Y	
7E	A	0	ZONE2 MUTE ON	Y	
7E	A	1	ZONE2 MUTE OFF	Y	
7E	A	2	AUDIO MUTE ON	Y	
7E	A	3	AUDIO MUTE OFF	Y	
7E	A	4	6CH INPUT ON	Y	
7E	A	5	6CH INPUT OFF	Y	
7E	A	6	INPUT MODE AUTO	Y	
7E	A	7	INPUT MODE DD RF	Y	
7E	A	8	INPUT MODE DTS	Y	
7E	A	9	INPUT MODE DIGITAL	Y	
7E	A	A	INPUT MODE ANALOG	Y	
7E	A	B	SPEAKER A ON	Y	
7E	A	C	SPEAKER A OFF	Y	
7E	A	D	SPEAKER B ON	Y	
7E	A	E	SPEAKER B OFF	Y	
7E	B	0	ON SCREEN OFF	Y	
7E	B	1	ON SCREEN SHORT	Y	

Extended			Function	RX-V1	
I/R Code				I/R	RS-232c
7E	B	2	ON SCREEN FULL	Y	
7E	B	3	SLEEP OFF	Y	
7E	B	4	SLEEP 120 min.	Y	
7E	B	5	SLEEP 90 min.	Y	
7E	B	6	SLEEP 60 min.	Y	
7E	B	7	SLEEP 30 MIN.	Y	
7E	B	8	6.1/ES ON	Y	
7E	B	9	6.1/ES OFF	Y	
7E	B	A	ZONE2 POWER ON	X	
7E	B	B	ZONE2 POWER OFF	X	
7E	B	C	TUNER BAND FM	X	
7E	B	D	TUNER BAND AM	X	
7E	B	E	AUTO TUNING UP	X	
7E	B	F	AUTO TUNING DOWN	X	
7E	E	O	EFFECT OFF	Y	
7E	E	1	PROGRAM 1 A (PROGRAM 1 HALL A)	HALL A	
7E	E	2	PROGRAM 1 B (PROGRAM 1 HALL B)	HALL B	
7E	E	3	PROGRAM 2 A (PROGRAM 1 HALL C)	HALL C	
7E	E	4	PROGRAM 2 B (PROGRAM 2 HALL D)	HALL D	
7E	E	5	PROGRAM 3 A (PROGRAM 2 HALL E)	HALL E	
7E	E	6	PROGRAM 3 B (PROGRAM 2 LIVE CONCERT)	LIVE CONCERT	
7E	E	7	PROGRAM 4 A (PROGRAM 3 TOKYO)	TOKYO	
7E	E	8	PROGRAM 4 B (PROGRAM 3 FREIBURG)	FREIBURG	
7E	E	9	PROGRAM 5 A (PROGRAM 3 ROYAUMONT)	ROYAUMONT	
7E	E	A	PROGRAM 5 B (PROGRAM 4 VILLAGE GATE)	VILLAGE GATE	
7E	E	B	PROGRAM 6 A (PROGRAM 4 VILLAGE VANGUARD)	VILLAGE VANGUARD	
7E	E	C	PROGRAM 6 B (PROGRAM 4 BOTTOM LINE)	BOTTOM LINE	
7E	E	D	PROGRAM 7 A (PROGRAM 5 ROXY THEATRE)	ROXY THEATRE	
7E	E	E	PROGRAM 7 B (PROGRAM 5 WAREHOUSE LOFT)	WAREHOUSE LOFT	
7E	E	F	PROGRAM 7 C (PROGRAM 5 ARENA)	ARENA	
7E	F	0	PROGRAM 8 A (PROGRAM 6 DISCO)	DISCO	
7E	F	1	PROGRAM 8 B (PROGRAM 6 PARTY)	PARTY	
7E	F	2	PROGRAM 9 A (PROGRAM 6 AMUSEMENT)	AMUSEMENT	
7E	F	3	PROGRAM 9 B (PROGRAM 7 POP/ROCK)	POP/ROCK	
7E	F	4	PROGRAM 10 A (PROGRAM 7 DJ)	DJ	
7E	F	5	PROGRAM 10 B (PROGRAM 8 CLASSICAL/OPERA)	CLASSICAL/OPERA	
7E	F	6	PROGRAM 11 A (PROGRAM 8 PAVILLION)	PAVILLION	
7E	F	7	PROGRAM 11 B (PROGRAM 9 MONO MOVIE)	MONO MOVIE	
7E	F	8	PROGRAM 12 A (PROGRAM 9 VARIETY/SPORTS)	VARIETY/SPORTS	
7E	F	9	(PROGRAM 10 SPECTACLE)	SPECTACLE	
7E	F	A	(PROGRAM 10 SCI-FI)	SCI-FI	
7E	F	B	(PROGRAM 11 ADVENTURE)	ADVENTURE	
7E	F	C	(PROGRAM 11 GENERAL)	GENERAL	
7E	F	D	(PROGRAM 12 NORMAL)	NORMAL	
7E	F	E	(PROGRAM 12 ENHANCED)	ENHANCED	
7C	F	0	DVD-C996 NORMAL PLAY MODE	IN REMOTE	
7C	F	1	DVD-C996 RANDOM MODE	IN REMOTE	
7C	F	2	DVD-C996 PROGRAM MODE	IN REMOTE	
7C	F	3	DVD-C996 REPEAT MODE OFF	IN REMOTE	
7C	F	4			
7C	F	5	DVD-C996 ALL DISC REPEAT	IN REMOTE	