

5. Programming System, Humidity and Frost

	Press	Display
a. Set system		SYSTEM 0000
b. Set % humidity (to program your frost setting if outdoor sensor is installed, press humidity key a second time)		HUMIDITY 20%
		HUMIDITY 30%

Changing the Program Temporarily

a. Changing the temperature temporarily for current period	 	60° 88° TEMPORARY
b. Changing the fan setting temporarily for current period		60° 88° TEMPORARY FAN CIRC
c. Changing the vent setting temporarily for current period		60° 88° TEMPORARY VENT FAN CIRC

Holding the Program


a. Hold indefinitely	 	HOLD 60° 88° HEAT SET PT COOL
----------------------	----------	----------------------------------

	Press	Display
b. Vacation hold for 1 to 7 days, use step a (hold indefinitely) and then use the following steps		9:00 AM SUN MON TUE WED THU FRI SAT
		11:00 AM SUN MON TUE WED THU FRI SAT
		HOLD 60° 88° HEAT SET PT COOL
c. End hold		9:00 AM MON

Checking Readings and Settings

a. Press check repeatedly to see room humidity, outside temperature, fan setting, ventilator and system settings	
--	--

See Owner's Guide, form 69-0891 for more information or call 1-800-468-1502.

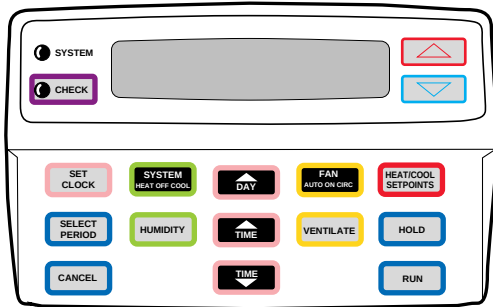

M6260

Honeywell



Quick Guide

As an ENERGY STARSM partner, Honeywell has determined that this product meets the ENERGY STARSM guidelines for energy efficiency.




Quick Guide

NOTE: Press the **RUN** key at anytime to exit programming.

1. Set the Clock	Press	Display
a. Enter clock setting mode		1:00 PM MON
b. Set current day		1:00 PM SUN
c. Set current time	 	4:00 PM SUN
d. Exit clock setting mode		4:00 PM SUN
2. Starting Over		
a. Optional: Clear all programming (press SELECT PERIOD and hold CANCEL until PROG CLR is displayed)	 	---:--- °--- SUN SLEEP PROG CLR
3. Program 1st Day		
a. Enter program mode		---:--- °--- SUN SLEEP
b. Select a day, start with Monday		---:--- °--- MON SLEEP
c. Select a period, start with WAKE		---:--- °--- MON WAKE
d. Set the period starting time	 	6:00 AM MON

	Press	Display
e. Set the temperature for heating	 	HEAT SET PT 68° COOL 70° HEAT 70° COOL SET PT 70°
f. Set the temperature for cooling	 	HEAT 70° COOL SET PT 70° WAKE HEAT 70° COOL SET PT 74° WAKE
NOTE: If you lower cool temperature closer than 3°, the heat setpoint will lower to keep the 3° differential (in AUTO).		
g. Choose fan operation:		HEAT 70° COOL SET PT 74° WAKE FAN AUTO
h. Choose outdoor air ventilation (if installed)		HEAT 70° COOL SET PT 74° WAKE FAN AUTO VENT

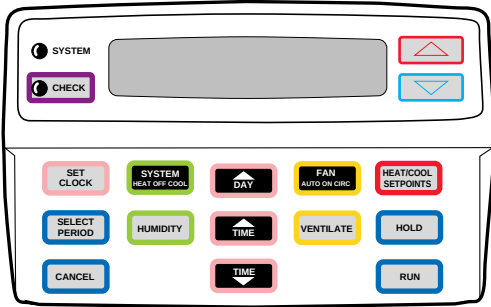

M6260

	Press	Display
i. Repeat steps 3b-h to program LEAVE, RETURN and SLEEP for the first day		
j. Copy program to rest of the days (Hold DAY key to display each weekday)		10:00 PM THU RETURN
k. Exit programming mode (saves program)		4:00 PM SUN
4. Changing the Program		
a. Enter program mode		6:00 AM 70° 74° MON WAKE
b. Locate desired day and period	 	6:00 AM 70° 74° SAT WAKE 6:00 AM 70° 74° SAT LEAVE
c. Change time	 	9:00 AM 70° 74° SAT LEAVE
d. Change temperature	 	HEAT 70° COOL SET PT 70°
e. Change fan setting		HEAT 70° COOL SET PT 70° LEAVE FAN AUTO
f. Change vent setting		HEAT 70° COOL SET PT 70° LEAVE FAN AUTO VENT
g. Exit program mode		4:00 PM SUN