

Table of Contents

Ordering Policies and Guidelines	1-1
On Line Spares Information	1-4
Ordering Information.....	1-5
Enterprise Appliances	2-1
Spare parts for Sun Ray 1 Enterprise Appliance	2-2
Desktop Systems	3-1
Spare parts for JavaStation Desktop.....	3-2
Spare parts for JavaStation Tower.....	3-4
Spare parts for SPARCstation 4	3-6
Spare parts for SPARCstation 5	3-9
Spare parts for SPARCstation 10	3-12
Spare parts for SPARCstation 20	3-15
Spare parts for SPARCstation Voyager.....	3-18
Spare parts for Sun Ultra 1 Models 140/170	3-20
Spare parts for Sun Ultra 1 Models 140E, 170E and 200E (A12).....	3-23
Spare parts for Sun Ultra 2 and Ultra Enterprise 2 Models 1170, 2170, 1200, 2200, 1300 and 2300 (A14).....	3-26
Spare parts for Sun Ultra 5 (A21).....	3-29
Spare parts for Sun Ultra 10 (A22).....	3-32
Spare parts for Sun Ultra 30 (A16).....	3-35
Spare parts for Sun Ultra 60 (A23).....	3-38
Spare parts for Sun Ultra 80 (A27).....	3-41
Spare parts for SPARC Xterminal 1.....	3-42
Telco, Network & Media Server Systems	4-1
Spare parts for Sun Netra t1100/t1120/t1125 Telco Servers.....	4-2
Spare parts for Netra ft 1800	4-3
Spare parts for Netra 150.....	4-6
Spare parts for Netra t1 Model 105 Network Server.....	4-8
Spare parts for Netra xt 600 DC	4-9
Spare parts for Netra t 1400/1405 Telco Server	4-10
Workgroup Server Systems	5-11
Spare parts for Enterprise 150	5-12
Spare parts for Enterprise 250 (A26).....	5-14
Spare parts for Enterprise 450 (A20, A25).....	5-17
Spare parts for Enterprise 220R.....	5-20
Spare parts for Enterprise 420R.....	5-21
DataCenter Server Systems	5-22
Spare parts for SPARCcenter 2000 and SPARCcenter 2000E.....	5-23
Spare parts for SPARCcenter 2000E with Redundant Power Supply.....	5-25

Table of Contents

Spare parts for Enterprise 5000/5001/5002/5500/5501.....	5-27
Spare parts for Enterprise 6000/6001/6002/6500/6501.....	5-30
Spare parts for Enterprise 5000/5001/5002/6000/6001/6002.....	5-34
Spare parts for Enterprise 5500/5501/6500/6501.....	5-35
Spare parts for Enterprise 10000 Data Center Cabinet.....	5-36
Spare parts for Enterprise 10000	5-38
Departmental Server Systems	5-42
Spare parts for SPARCserver 1000 and SPARCserver 1000E.....	5-43
Spare parts for Enterprise 3000/3001/3002/3500/3501.....	5-44
Spare parts for Enterprise 4000/4001/4002/4500/4501.....	5-47
Server Systems	5-50
CS 6400	5-51
Options	6-1
Desktop Memory	6-3
Server Memory	6-5
CPU Modules	6-8
16-inch to 24-inch Monitor Options.....	6-11
Sun Camera/Graphics Accelerators & Adapters	6-17
Sun Camera/Graphics Accelerators & Adapters (continued).....	6-18
PCMCIA/SBus/ISDN/FDDI/PCI/SunATM/Ethernet	6-21
I/O Boards/SBus Cards, Boards & Host Adapters	6-27
StorEdge A1000	6-31
StorEdge A1000 - Netra st A1000.....	6-37
StorEdge D1000	6-38
StorEdge D1000 - Netra st D1000.....	6-44
StorEdge A3000	6-45
StorEdge A3500 Configuration Overview	6-47
StorEdge A3500	6-48
StorEdge A3500 FC	6-55
StorEdge - Netra st D130.....	6-56
StorEdge A5000 Configuration Overview	6-57
StorEdge A5000	6-58
StorEdge A5100	6-64
StorEdge A5200	6-68
StorEdge UniPack and MultiPack	6-73
StorEdge Tape Drive Options.....	6-76
External CD-ROM Storage Options.....	6-81
Internal Tape, Floppy, and CD-ROM Storage Options.....	6-82

Table of Contents

Options	6-93
Storage Option Packages	6-95
External Hard Drive Options.....	6-106
External Tape Drive Options.....	6-123
Internal Hard Drive Storage Options.....	6-139
StorEdge L1000/L1800/L3500/L11000	6-152
Cabinets/Trays/Cables/Power Supplies/FE-Handbook	6-157
Country Kits (Type 5)/Localized Power Cords.....	6-164
Type 6 Sun Ray 1 Keyboards and Mouse	6-170
Other Spares	7-1
Other New Spares	7-2
Discontinued Spares	8-1